GB AWV 402

PROGRAMME TABLE

IGNIS is a registered trademark

Cotton
Cold wash
Synthetic
Delicate/Wool
On/Off

Programme		Type of textiles/Degree of soilling	Max Load kg	Detergent and Additives			Special functions that can be selected	Programme selector knob
				Prewash	Wash	Fabric Softner	Cold wash	
1	**Cotton 95°C with pre-wash**	Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc). The max load for heavily soiled laundry is 3.5 kg.	5.0	❊	Yes	❊	❊	**1**
2	**Cotton 95°C**	Averagely soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc). The max load for heavily soiled laundry is 3.5 kg.	5.0	–	Yes	❊	❊	**2**
3	**Cotton 60 °C**	Averagely soiled, textiles in cotton and linen (shirts, towels,etc). The max load for heavily soiled laundry is 3.5 kg	5.0	–	Yes	❊	❊	**3**
4	**Synthetic 60°C**	Averagely soiled textils in cotton, linen, polyester (Diolen, Trevira); polyamide (Perlon, Nylon), other synthetics or similar blends.	2.0	–	Yes	❊	❊	**4**
5	**Cotton short 40°C Synthetic short 40°C**	Lightly soiled textils in cotton, linen, polyester (Diolen, Trevira); polyamide (Perlon, Nylon), other synthetics or similar blends.	2.5 2.0	–	Yes	❊	❊	**5**
6	**Delicate 40°C**	Curtains and delicate synthetic textiles (dresses, skirts and blouses etc).	1.5	–	Yes	❊	❊	**6**
7	**Wool 40°C**	Only machine washable woollens with pure new wool label.	1.0	–	Yes	❊	❊	**7**
	Rinse and long spin	With this programme you can add fabric softner or starch. The programme ends with a long spin cycle.	5.0	–	–	❊	–	
	Long spin	This programme provides a long spin cycle, the same as the spin cycle in the Cotton programme.	5.0	–	–	–	–	
	Rinse and short Spin	With this programme you can add fabric softner or starch. The programme ends with a short spin cycle.	1.5	–	–	❊	–	
	Short Spin	This programme provides a short spin cycle, the same as the spin cycle in the Wool programme.	1.5	–	–	–	–	
	Draining	Drain only, without spin. e.g to unload the laundry earlier.	–	–	–	–	–	

CONSUMPTION DATA

Programme		Water	Energy	Programme duration
		(l)	(kWh)	(min.)
Cotton 95 °C with pre-wash	1	80	2.00	120
Cotton 95 °C	2	70	1.80	110
Cotton 60 °C	3	70	1.20	90
Synthetic 60 °C	4	60	0.90	85
Cotton short 40°C Synthetic 40 °C	5	65 60	0.70 0.60	75 75
Delicate 40 °C	6	80	0.60	70
Wool 40 °C	7	80	0.60	65

SELECTING THE PROGRAMME

Turn the programme selector knob clockwise to the programme with the desired temperature.

PRESS THE DESIRED SPECIAL OPTION BUTTON

Cold wash button

- The water is used at the water supply temperature.

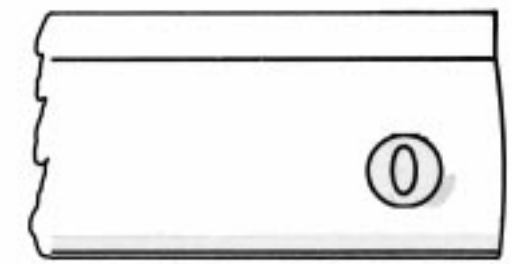

PROGRAMME START

1. Plug in the appliance.
2. Turn on the water supply tap.
3. Press the “ON/OFF” button.

DOOR LOCK

The door locks automatically after the programme start until the end of the programme.

PROGRAMME END

- The programme sequence indicator is at “Stop”.

1. Press the “ON/OFF” button.
2. Cancel the special options by pressing the appropriate buttons.
3. Turn the water supply tap(s) off.
4. Wait for the door to unlock (about 2 minutes).
5. Open the door and unload the machine.

Note: Do not fully close the door but leave it ajar to allow the drum to dry out.

PROGRAMME RESELECTION

1. Press the “ON/OFF” button.
2. Select the new programme, temperature and relative options.
3. Press the “ON/OFF” button.